

AT Command	Command Description	Notes
+++	Enter command mode	
AT	Reports OK	
ATI	Show board variant, firmware	
ATI0	Show all user settable parameters	
ATI1	Show board variant	
ATI2	Show firmware version	
ATI3	Display latest RSSI	
ATI4	Generate random byte based on RSSI	
ATI5	Show max possible bytes per second	
ATI6	Show AES Key Values	
ATI7	Show FHSS Channel	
RTI?	Show equivalent remote setting	Returns error if not linked.
ATO	Exit command mode	
ATZ	Reboot the radio	
AT&W	Write current parameters to EEPROM	
AT&F	Reset all parameters to factory defaults	
AT&T=RSSI	Show RX packet RSSI, SNR, and FreqError	
ATT	Enter Training Mode	
ATF	Enter Training Mode with Defaults	
ATSn?	Display a parameter	Displays radio parameter number 'n'
ATSn=X	Set a parameter	Sets radio parameter number 'n' to 'X'
RTSn?	Display remote parameter	Displays remote radio parameter number 'n'. Returns error if not linked.
RTSn=X	Set remote parameter	Sets remote radio parameter number 'n' to 'X'. Returns error if not linked.
ATLn=X	Set link parameter	Sets both radio parameter number 'n' to 'X'. Returns error if not linked.